

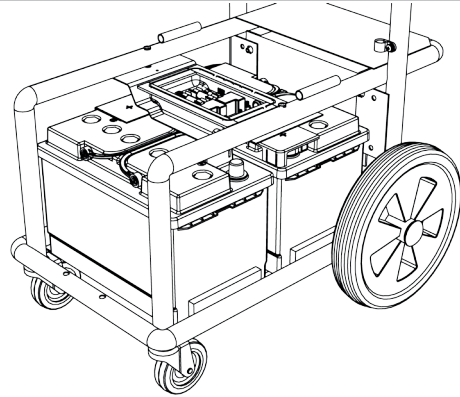


WVB 750-2
WVDB 750-2
Battery Powered
Wet / Dry Vacuum

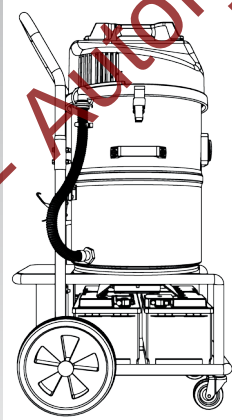

Owner Instructions

Warning! Read the Instructions before using the machine.




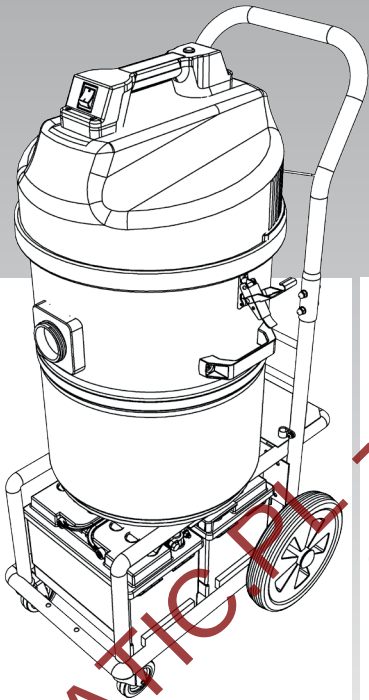


www.numatic.co.uk

Części zamienne do Numatic WVBD750 – sprawdź w euro-matic.pl »

Autoryzowany sklep euro-matic.pl · infolinia 505 605 601 · sklep@euro-matic.pl

Kit BS8 607241 38mm Stainless Steel ProFlo 400mm Wet & Dry Kit

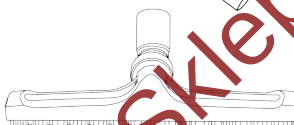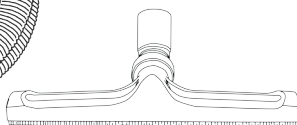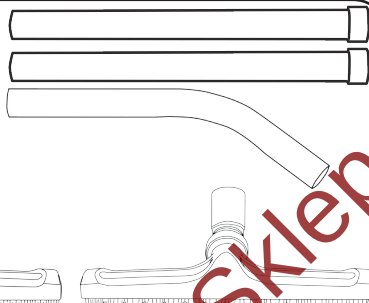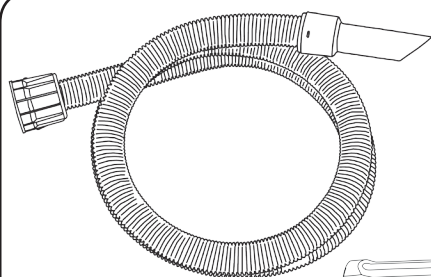

NVB-602102 2.4m NuFlex Threaded Hose

NVB-602380 ProFlo 400mm Wet Pick Up Floor Tool


NVB-602919 Stainless Steel Tube Bend

NVB-602381 ProFlo 400mm Dry Pick Up Floor Tool

NVB-602920 Stainless Steel Extension Tube x 2




PLEASE READ THESE INSTRUCTIONS BEFORE USING THE MACHINE.

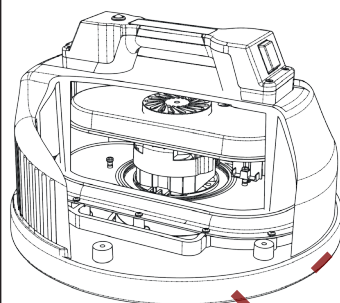


WVB
Simplex Head

The Structoform power head is available in two variants, Simplex (1 motor) or for more performance the Duplex (2 motor)

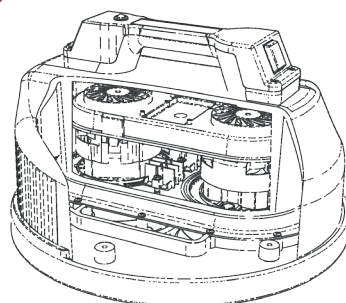

WVDB
Duplex Head

Assembly

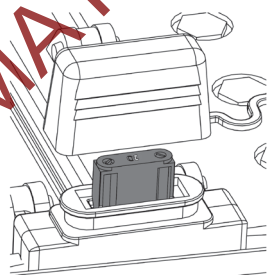


Your machine is packed for transport with the batteries isolated.

Make sure the handle switch is in the 'OFF' position


Insert the fuse into the fuse holder located on the right side of the machine.

WVB: 20 Amp Fuse (221091).
WVDB: 40 Amp Fuse (221047).

Then fit the fuse holder cover.

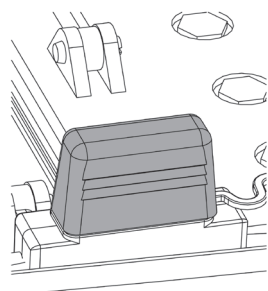

Assembly (Cont)

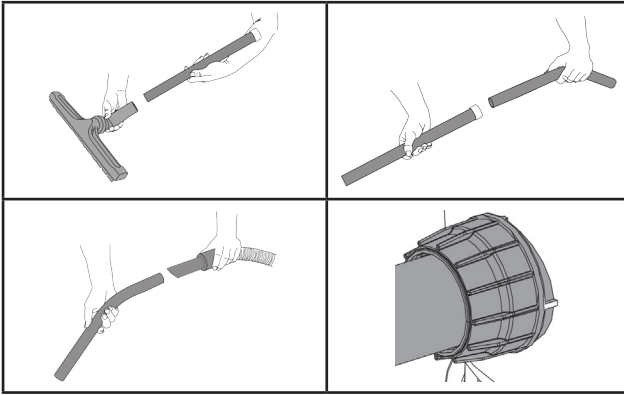


Operating the Machine



BEFORE USING YOUR MACHINE FOR THE FIRST TIME, YOU SHOULD CHARGE YOUR BATTERIES.




ON/Off Switch

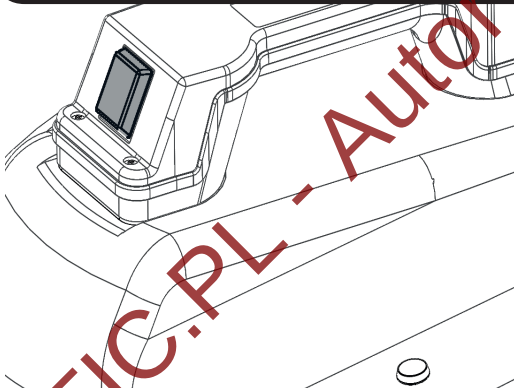

It will now be possible to operate the machine via the BLUE switch located on the front of the handle.

AMBER WARNING LIGHT

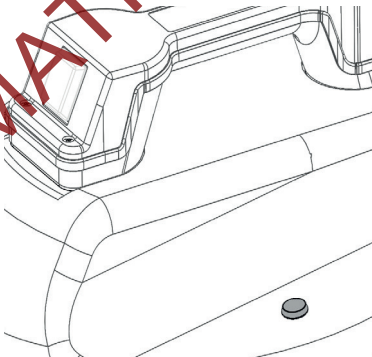

When the battery voltage drops to a medium level an amber light will illuminate. The machine will continue to run.



When the battery voltage drops to a low level the machine will automatically shut down and the amber light will flash.

This indicates that a battery recharge is necessary. The amber light will not flash if the handle switch is on the 'off' position.

Dry Use

For *DRY* use: Open the toggles and remove the head from machine, then remove the wet float cage if fitted.

Fit a HepaFlo Dust bag NVM-4BH over the inlet neck inside the machine and fit the filter assembly.

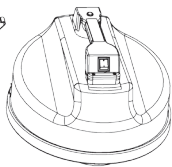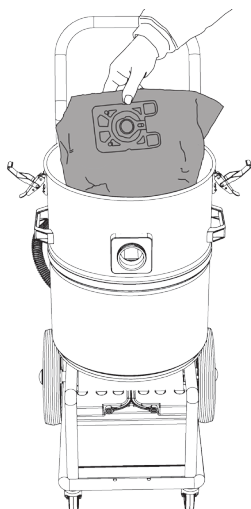

Filter Assembly




Replace the machine head and secure using the toggles, your machine is now ready for *DRY* use.



Cleaning your machine *DRY*

For *DRY* cleaning: Open the toggles and remove the head from the machine, remove the filter assembly and then remove the dust bag.


Seal the dust bag and dispose of the bag in an approved waste disposal area.

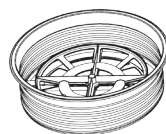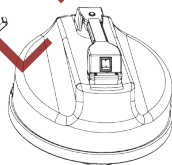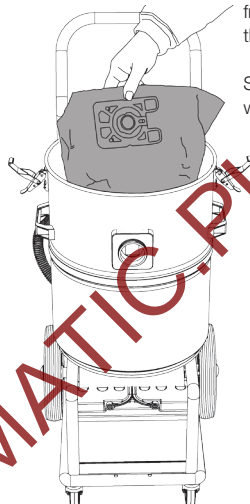

Filter Assembly


Reassemble machine using a new NVM 4BH bag, filter assembly, and secure the head using the toggles.

Your machine is now ready for *DRY* use.

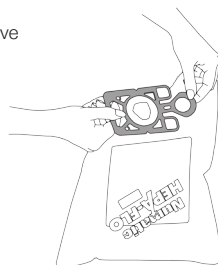

Wet Use

For *WET* use: Open the toggles and remove the head from the machine, then remove the filter assembly and NVM 4BH dust bag if fitted. Fit the wet float cage assembly.

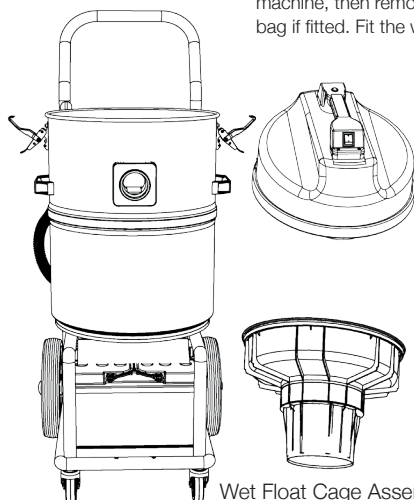

Wet Float Cage Assembly

Replace the machine head and secure using the toggles.

Your machine is now ready for *WET* use.




Cleaning your machine *WET*

For *WET* cleaning: Drain the waste water into an appropriate drain using the hose fitted to the machine.


Once the water is drained remove the drum from the chassis and rinse with clean water.

The float cage assembly can also be cleaned by rinsing with cold water.

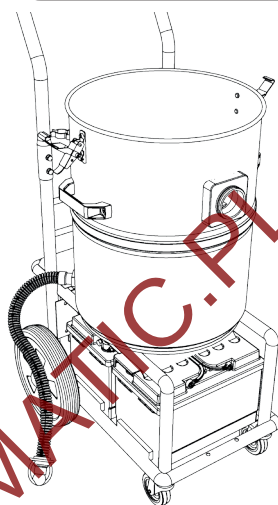


Reassemble the machine with the float cage and secure the head using the toggles.

Your machine is now ready for *WET* use.

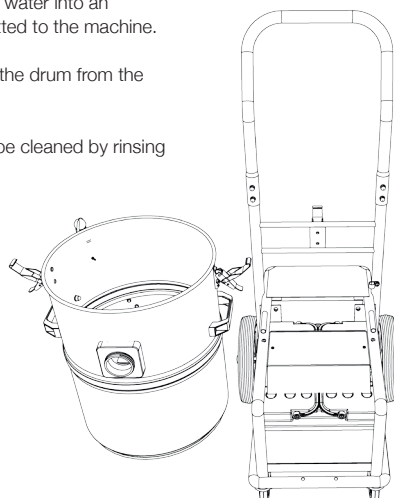


Charging your machine

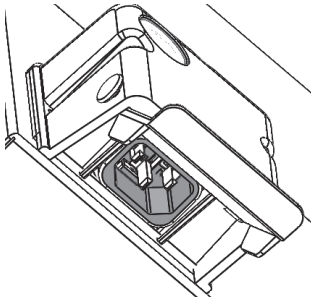

To re-charge the batteries locate the charger at the lower rear of the chassis, lift the flap on the bottom of the grey socket protector and connect the charging lead.

Connect the charger to the mains supply and switch 'on' at the socket.

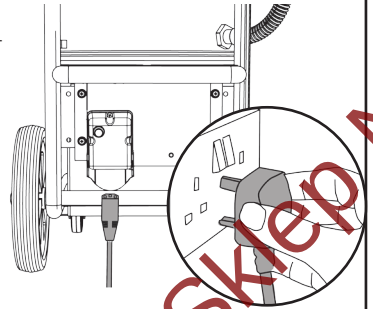


When the mains supply is connected to the appliance the *large RED* light will be permanently illuminated.

During charging the *small RED* indicator light will flash until the batteries reach maximum capacity.

When this point is reached the small red indicator light will be permanently illuminated.

This will take approximately 8-10 hours. While charging the batteries the vacuum motor(s) should not be operated.

CIRCUIT PROTECTION

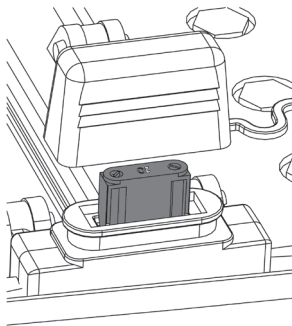

Your machine is protected by a fuse.


Only replace with a genuine Numatic Part.

WVB: 20 Amp Fuse (221091).

WVDB: 40 Amp Fuse (221047)

Failure to rectify any problem or in the event of a breakdown
contact your Numatic dealer
or the Numatic Technical helpline +44 (0)1460 269268

BATTERY CARE

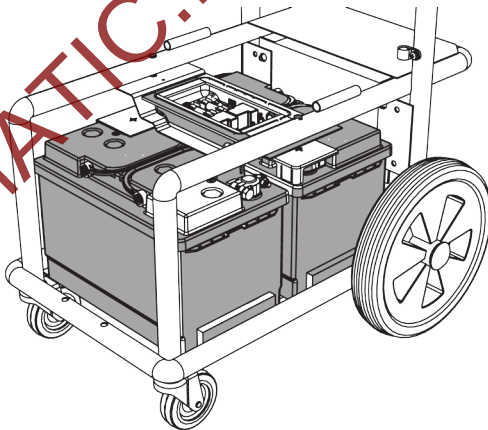

1. Always re-charge the batteries after use. It is not necessary to wait until they are fully discharged.

2. Leave the charger to operate for a minimum of 4 hours after the amber LED light has come on.

3. Charging at least once a week will help to prolong battery life.

4. DO not store the machine with the batteries discharged.

About your Machine

RATING LABEL	
1	Company Name & Address
2	Model
3	Voltage
4	Rated Input Power Watts (W)
5	Weight (ready to work)
6	IPX4
7	WEEE Logo
8	CE Mark
9	Machine yr/wk Serial number

1

2

3

4

5

6

7

8

9

Numatic
International Ltd.
CHARD, ENGLAND, TA202GB

*****V

*****W

****Kg

IPX4







094300118

Safety Critical Components

Charging Lead: HO5VV-F 2m x 1.00 mm² x 3 Core

Battery Charger: 24V DC 1.5A

PPE (personal protective equipment) That may be required for certain operations.

				
Ear Protection	Safety Footwear	Head Protection	Safety Gloves	
				
Eye Protection	Protective Clothing	Dust / Allergens Protection	Hi-Vis Jacket	Caution Wet Floor Sign

Note. A risk assessment should be conducted to determine which PPE should be worn.

WEEE Legislation (Waste, Electrical and Electronic Equipment)

Vacuum cleaner, accessories and packaging should be sorted for environmentally - friendly recycling.
(Only for EU Countries)

Do not dispose of vacuum cleaner into household waste! According to the European Directive 2012/19/EU on waste electrical and electronic equipment and its incorporation into national law.

Vacuum cleaners that are no longer suitable for use must be separately collected and sent for recovery in an environmentally - friendly manner.



Daily

- Keep the machine clean, including hoses and tubes.
- Ensure the bag and filter are fitted.
- Regularly examine the power cord.
- Check dust bag frequently.
- Check filters are clean.

Weekly - as daily and:-

- Check for any worn or damaged parts and replace immediately.
- Do not steam clean or pressure wash.



ORIGINAL INSTRUCTIONS
READ MANUAL BEFORE USE

Information on WVB / WVDB



WARNING

As with all electrical equipment care and attention must be exercised at all times during its use, in addition to ensuring that routine and preventative maintenance is carried out periodically in order to ensure its safe operation.

Failure to carry out maintenance as necessary, including the replacement of parts to the correct standard could render this equipment unsafe and the manufacturer can accept no responsibility or liability in this respect.

When ordering spare parts always quote the Model Number / Serial Number specified on the Rating Plate.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

It is essential that this equipment is correctly assembled and operated in accordance with current safety regulations.

When using the equipment always ensure that all necessary precautions are taken to guarantee the safety of the operator and any other persons who may be affected.

The machine, while charging, must be positioned so that the mains plug is easily accessible.

When cleaning, servicing or maintaining the machine, replacing parts or converting to another function the power source shall be isolated by removing the fuse between the two batteries and make sure the mains AC cable is unplugged from the machine.

Machines left unattended shall be secured against unintentional movement.

Operators shall be adequately instructed as to the correct use of the machine.

If foam or liquid escapes from the machine, switch off immediately and empty.

If this product does not have a factory installed Numatic battery charger, then it is the responsibility of the owner and user of the product to ensure that the charging system and battery combination are compatible, fit for purpose and safe to use.

This machine is not suitable for the collection of biological hazards, hazardous or explosive dusts. Contact your local distributor if you require a machine capable of performing these tasks.



CAUTION

This machine is not suitable for picking-up hazardous dust.

This machine shall be stored indoors only

This machine is for indoor use only.

Read the instruction manual before using the appliance.

Clean the water level limiting device regularly and examine for signs of damage.

This product meets the requirements of IEC / EN 60335-2-69:2012

NOTES: This machine is also suitable for commercial use, for example in hotels, schools, hospitals, factories, shops and offices for other than normal housekeeping purposes.

- Keep your machine clean.
- Keep filters clean.
- Use filter bags, they will enhance performance and help keep machine clean.
- Use a Numatic original filter bag under fine dust conditions.
- Keep hoses and tubes clear.
- Replace any worn or damaged parts immediately.
- Regularly examine the power cord. If damage is found such as cracking or ageing the power cord must be replaced by a competent person using the correct Numatic original part.
- Change dust bag frequently.
- Keep diffuser filter (where fitted) clean.
- Only use the brushes provided with the machine. The use of other brushes may impair safety.
- Regularly inspect the float cage assembly for signs of damage.

DO



- Use steam cleaners or pressure washers to clean the machine or use in the rain.
- Attempt machine maintenance or cleaning unless the power plug has been removed from the supply outlet.
- Allow any inexperienced repairs. Call the experts.
- Use to suck up hot ashes or lighted cigarette ends.
- Allow the machine to be used by inexperienced or unauthorised operators or without appropriate training.
- Store your machine in wet conditions.
- Expect the machine to provide trouble-free, reliable operation unless maintained correctly.

Precautions when working with batteries

1. Always wear protective clothing e.g. face visor, gloves and overalls when working with batteries
2. Whenever possible always use a properly designated and well-ventilated area for charging. Do not smoke or bring naked flames into the charging area.
3. Remove any metallic items from hands, wrists and neck i.e. rings, chains etc. before working on a battery.
4. Never rest tools or metallic objects on top of the battery.
5. When charging is complete disconnect from the mains supply.
6. The batteries must be removed from the machine before it is scrapped.
7. The machine must be disconnected from the supply when removing the battery.
8. Only use genuine NUMATIC replacement batteries.
9. Do not allow the batteries to become fully discharged; it may not be possible to recharge them. Batteries should not be discharged below 9.5 volts with 10 amps flowing.
10. Do not allow one battery to be discharged separately to the other.
11. Do not mix batteries from different machines.
12. The batteries fitted to this product are Valve Regulated Lead Acid (VRLA) gel electrolyte type. The fitting of any other type of battery may cause a safety hazard.

BATTERY CARE

1. Always recharge the batteries after use. This can be done at any time its not necessary to wait until they are fully discharged; they do not develop a "memory".
2. Leaving the charger to operate for a minimum of 4 hours after fully charged, at least weekly, will prolong battery life.
3. Do not store the machine with the batteries discharged.

Battery Disposal

1. The batteries are to be disposed of safely and in accordance with the battery directive and local government guidelines.


Data

	Charging Power	Run Time	Recharge Time	Noise Level
WVB 750-2 WVDB 750-2	220V-240V AC 50-60 Hz	2½ Hours 1¼ Hours	10 Hours 10 Hours	82 dB(A) MAX
Motor	Capacity Dry	Capacity Wet	Weight	Dimensions
WVB 750-2: 430W WVDB 750-2: 860W	31 Litres 31 Litres	22 Litres 22 Litres	70.2 Kg 72.2 Kg	455 x 550 x 1025mm

Spares

604019	10 x NVM-4BH HepaFlo Bags
221091	20 Amp fuse
221047	40 Amp fuse

Schematic Diagram

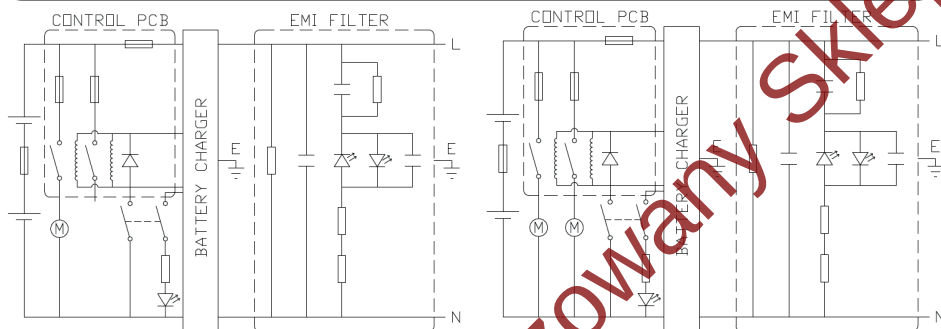

DRW-24380 - WVB 750-2

DRW-24367 - WVDB 750-2

Declaration Document

CE 1

EU DECLARATION OF CONFORMITY

We hereby declare under our sole responsibility that the following equipment fulfils all the relevant provisions of the following EU Directives

Machinery Directive 2006/42/EC
EMC Directive 2014/30/EU
RoHS Directive 2011/65/EU

Machine Description: Vacuum Cleaner
Machine Type: WVB, WVDB.

Relevant standards upon which conformity is declared include:

EN 60335-1: 2012 + AC:2014 + A11:2014
EN 60335-2-69: 2012
EN 55014-1: 2006 + A1:2009 + A2:2011
EN 55014-2: 1997 + A1:2001 + A2:2008
EN 61000-3-2: 2014
EN 61000-3-3: 2013
EN 62233: 2008

A technical construction file for this equipment is retained at the manufacturer's address under the authorisation of the following signatory:

Name: Allyn Boyes Position: Development Manager

Signed: Date: 15/6/18

Numatic International Ltd
Chard Somerset
TA20 3JH
www.numatic.co.uk

GB

Numatic International Warranty

Numatic International Limited warrant to the original purchaser that its products are free of defects in both material or workmanship for the period shown below:-

Homecare and Cleancare Vacuum cleaners.....	2 Years
Rotary Floor Machines.....	2 Years
Twintec Auto Scrubber Dryer.....	1 Year
Vario Ride-On Scrubber Dryer.....	1 Year / 1500 Hours
Mopping, Compacts, Combi and Servocare Products.....	1 Year
Individual Accessories and Spare Parts.....	6 Months

Note: This warranty expressly excludes consumable parts such as carbon brushes, floor brushes, mops, batteries etc, that are considered replaceable from time to time during the normal working life of the machine.

- A. The warranty period commences from the date the goods are purchased.
- B. All warranty claims must be processed through the Dealer from whom the equipment was purchased. The Dealer will co-operate with the purchaser throughout the warranty claims procedure and will arrange any necessary repairs using genuine Numatic parts.
- C. If the original Dealer is no longer able to fulfil his obligations please contact Numatic International Limited with full details of the claim and proof of purchase so that this may be processed without delay.
- D. Any warranty claim can only relate to the specific part that is proven to be at fault and for which a replacement will be supplied but cannot be extended to constitute a claim against the complete machine.
- E. Numatic International will supply the Dealer with any warranty parts required, subject to the claim being validated, after return of the faulty items in accordance with Numatic International Limited's General Conditions of Sale.
- F. Claims will not be accepted if they are the result of fair wear and tear, misuse or abuse of any kind.
- G. No replacement will be given unless the appropriate evidence of the validity of the claim has been provided to the satisfaction of Numatic International Limited.
- H. Numatic International Limited reserve the right to charge for any unnecessary work carried out as a result of an invalid claim.
- I. No variation to this warranty may be made or implied by any member of Numatic International Limited or its Dealers unless such variation is in writing and authorised by the Company.

Numatic International Limited. Chard, Somerset, TA20 2GB
Telephone: 01460 68600 Fax: 01460 68458

© Numatic International Limited



Numatic INTERNATIONAL



Numatic International Limited.
Chard, Somerset TA20 2GB ENGLAND
Tel.: 01460 68600 www.numatic.co.uk



Numatic International GmbH. Fränkische Straße 15-19
D-30455 Hannover, DEUTSCHLAND
Tel.: 05 11 98 42 16 0 www.numatic.de



Numatic International SAS 13 / 17 rue du Valengelier
77500 CHELLES, FRANCE
Tel: 01 64 72 61 61 www.numatic.fr



BeNeLux Distribution, Numatic International BV
Postbus 101, 2400 AC Alphen aan den Rijn, NEDERLAND
Tel: 0172 467 999 www.numatic.nl



Numatic International (Pty.) Ltd.
16th & Pharmaceutical Roads, Midrand, Gauteng,
SOUTH AFRICA 1685
Tel: 0861 686 284 www.numatic.co.za



Numatic International Schweiz AG.
Sihlbruggstrasse 142, 6340 Baar. SCHWEIZ
Tel: 0041 (0) 41 76 80 76 - 0 www.numatic.ch



Numatic International ULDA. Centro de Negócios da Maia,
Rua Albino José Domingues, 581, 4470 – 034 Maia PORTUGAL
Tel: +351 220 047 700 www.numatic.pt

Specification subject to change without prior notice
www.numatic.co.uk © Numatic International Limited

906474 08/17 (A02)